

THE QUICKEST & EASIEST WAY TO SCALE FISH



YOU MUST READ ALL INSTRUCTIONS BEFORE USING

- * This product's transformer is UL Listed.
- * There are no user-serviceable parts inside. Servicing should only be done by an authorized service facility (See Warranty).
- * The motor and gears never need lubrication.

IMPORTANT SAFEGUARDS/SAVE THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be used, including the following:

- * The use of an attachment that is NOT recommended or sold by the manufacturer, may cause fire, electric shock or injury.
- * To protect against risk of electrical shock, do not put power unit or transformer in water or other liquids. Do not operate in water, under running water or under the rain.
- * This product should not be used by children and care should be taken when used near children.
- * This unit must be unplugged from its power source before cleaning or changing any accessory parts.
- * Do not operate any appliance with a damaged cord or after the appliance has been damaged in any manner. Return to the factory for examination, repair, or adjustment.
- * Avoid contact with any moving parts. (specialty head, screws, etc.)
- * If an extension cord is used, it must be plugged into a properly grounded power outlet so the unit and cord are grounded.
- * Do not cause the motor to stop or stall. This will burn out the motor.
- * Always use safety glasses and a fish board holder when using this product.
- * Dress properly. Do not wear loose clothing, gloves or jewelry. Contain long hair and keep your hair and clothing away from moving parts.
- * Be aware of the switch location when placing the tool down or when picking the tool up, you may accidentally activate the switch.
- * Stay alert, watch what you are doing and use caution when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.

LIMITED WARRANTY

The Ultimate Fish Scaler is warranted for a period of one year to be free from defects in materials and workmanship. This warranty does not apply to units damaged by water, misuse, normal wear and tear, unreasonable or commercial use. The warrantor is not liable for any incidental or consequential damages due to any such alleged defect. In the unlikely event a defect exists, we reserve the right to repair or replace units returned during the warranty period with a dated receipt & postage paid to the factory.

Be sure to include your name, address, zip code, and a description of what is wrong with the unit.

Ship to: C & J Innovative Products Inc.
10270 SW 50th Terrace
Miami FL. 33165
(786) 768-1010 Office
(305) 274-4843 Fax

Website: www.Theultimatefishscaler.com



C & J Innovative
Products Inc.



C & J Innovative
Products Inc.

10270 SW 50th Terrace
Miami, Fl. 33165

Place 1st Class
Postage Here

HOW TO INSTALL OR REPLACE A SPECIALTY HEAD

 
 
 
 
 
- * Make sure that the unit is not connected to the power source! Picture 1
- * Make sure that the clear plastic cover is removed. Picture 2.
- * Insert the allen key and turn counter clock wise. Picture 3
- * Insert the specialty head. Picture 3
- * Insert the allen key and turn clock wise. Turn each screw half a turn at a time. Picture 4.

INSTRUCTIONS ON HOW TO SCALE A FISH

1. Make sure that the unit is **not** connected to the power source. Picture 1
2. Make sure that the specialty head is properly secured. Refer to instructions on "How To Install Or Replace Specialty Head".
3. Install the clear protective cover. Picture 2
4. It is **very important** to make sure that the unit is turned off and that you are working in a dry location. Picture 5
5. Insert unit to its power source. Picture 1
6. Remove the velcro from the bag and wrap the velcro around both cables, this will keep the plug in place when operating the unit. Picture 10
7. Place the fish on a fish holding board. Picture 6 (Not Included)
8. Familiarize yourself with the unit and its power switch, then hold unit firmly and turn it on. Picture 5
9. Begin scaling at the tail of the fish with the units red arrow facing the head of the fish. Proceed towards the head, putting continuous pressure against the grain of the scales. Do not push down on the fish, the direction of the force should be applied towards the head of the fish. Picture 7

HOW TO CLEAN AND CARE FOR THE ULTIMATE FISH SCALER


1. Unplug the fish scaler from its power source. Picture 1
2. Remove the clear protective cover. Picture 2
3. Wash the protective cover with water. Do not machine wash or scrub with any material. Picture 8
4. Use a moist cloth to wipe the fish scaler and its specialty head. Do not run water on the fish scaler. Picture 9

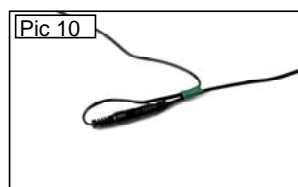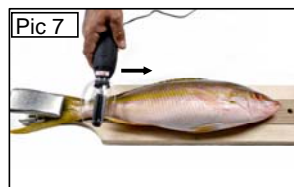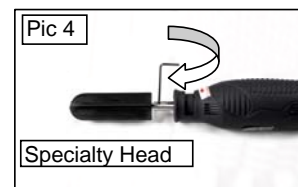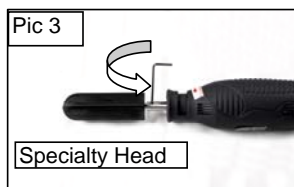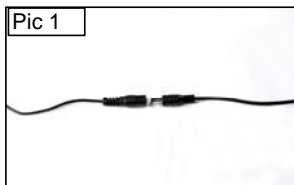

INCLUDED IN THIS PACKAGE



 OPTIONAL ACCESSORIES

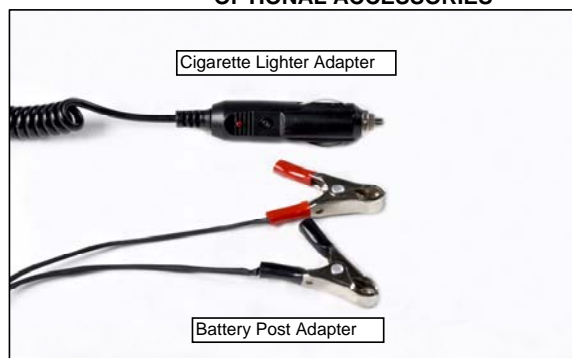

Thank you for purchasing The Ultimate Fish Scaler.

Please take the time to register this product, if not it will void your warranty



www.TheUltimateFishScaler.com

You can order optional accessories on our website or by sending a check with your registration. Shipping is included for orders in the USA.

- Battery Post Adapter \$14.99**
- Cigarette Lighter Adapter \$14.99**

Name _____ Email Address _____
 Address _____ Date of Purchase _____ Model: The Ultimate Fish Scaler
 City _____ State _____ Zip Code _____ 1. Purchaser's Age: Under 20; 20 to 30; 30 to 40;
 Telephone Number _____ 40 to 50; 50 and older.
 2. Where did you purchase this item? _____